

6040 East Sooke Rd.
Sooke, B.C. V9Z 0Z7
T: 778.352.1780
F: 778.352.1781
((• rcmsar.com •))

## **Electronic navigation equipment Pre-departure Checks**

## **Chart Plotter:**

- Cartography settings (layers of details, safety contours, soundings, nav-aids, lights etc)
- Chart datum (should be WGS 1984)
- GPS Fix status (D-Fix or SD-Fix preferred)
- HDOP (value should be under 2 or as low as possible depending on area)
- Variation (should be proper variation for the area and year)
- Display Orientation (H-up or N-up)
- Off-sets (check and set as operator's preference)
- Hide Rocks OFF
- De-clutter "OFF"
- Units (speed, distance, depth)
- AIS
- GPS Heading vs vessel's Compass heading (May require to be done when Underway if vessel has no heading sensor)
- Depth Sounder depth vs sounding on Chart ay vessel's location

## **RADAR:**

- Gain & Filters (auto or manual)
- Display Orientation (H-up or N-up)
- Range rings on or off
- Off-set
- AIS

## **Other Electronics/Tools:**

- Magnetic Compass
- Depth Sounder